


# Air Cleaner

---

## Cleaning

1. Remove the seat by pulling the seat lock lever (1) up.

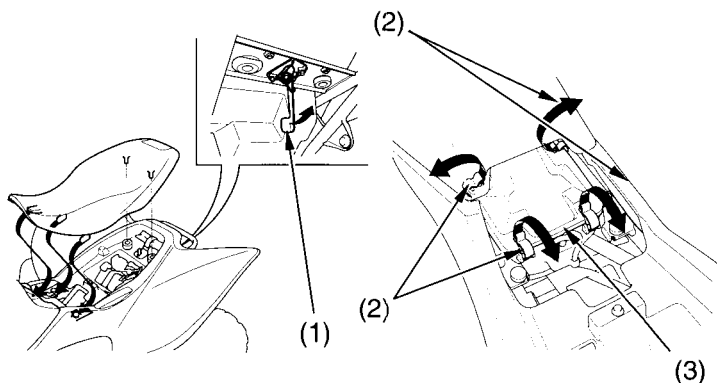

(1) seat lock lever  
(2) retainer clips

(3) air cleaner housing cover

2. Unlatch the four retainer clips (2).
3. Remove the air cleaner housing cover (3).
4. Remove the set plate (4) and remove the air cleaner assembly (5) from the case.