

# Maintenance Schedule

## Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		mi	km	100	600	1200	
				150	1000	2000	
		NOTE	HOURS	20	100	200	
*	FUEL LINE					I	—
*	THROTTLE OPERATION					I	109
	AIR CLEANER	NOTE 1				C	105
	SPARK PLUG					I	113
*	VALVE CLEARANCE			I	I	I	116
	ENGINE OIL			INITIAL=100mi (150km), 20 operating hours or 1 month : R REGULAR=Every 600mi (1000km), 100 operating hours or 12 months : R			99
**	ENGINE OIL STRAINER SCREEN					C	—
**	ENGINE OIL CENTRIFUGAL FILTER					C	—
*	ENGINE IDLE SPEED			I	I	I	112
*	SECONDARY AIR SUPPLY SYSTEM	NOTE 2				I	—

\* Should be serviced by your Honda dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 192).

\*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.