

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		↔	km	150	1000	2000	
		↔	mi	100	600	1200	
		NOTE	HOURS	20	100	200	
* FUEL LINE					I		—
* THROTTLE OPERATION					I		109
AIR CLEANER		NOTE 1			C	C	105
SPARK PLUG					I	I	114
* VALVE CLEARANCE				I	I	I	117
ENGINE OIL				INITIAL=150km (100mi) 20 operating hours or 1month;R REGULAR=Every 1000km (600mi) 100 operating hours or 12 months;R			99
** ENGINE OIL STRAINER SCREEN						C	—
** ENGINE OIL CENTRIFUGAL FILTER						C	—
* ENGINE IDLE SPEED				I	I	I	112
** SECONDARY AIR SUPPLY SYSTEM						I	—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Shop Manual.

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.