

# Engine Oil

---

## Checking & Adding Oil

Refer to *Safety Precautions* on page 84 .

Check the engine oil level each day before operating your ATV and add if needed.


*Before starting the engine to check the engine oil level*

1. Park your ATV on a firm, level surface.
2. Start the engine in a well-ventilated area and let it idle for 3 – 5 minutes. Stop the engine and wait 2 – 3 minutes.
3. Remove the oil filler cap/dipstick ( 1 ) from the right crankcase cover and wipe it clean.
4. Insert the oil filler cap/dipstick without screwing it in, then remove the oil filler cap/dipstick and check the oil level. The oil level should be between the upper level mark ( 2 ) and the lower level mark ( 3 ) on the oil filler cap/dipstick.
5. If required, add the specified oil into the filler cap hole, up to the upper level mark on the oil filler cap/dipstick. Do not overfill.
6. Reinstall the oil filler cap/dipstick.

### NOTICE

*Running the engine with an improper oil level can cause serious engine damage.*

RIGHT SIDE

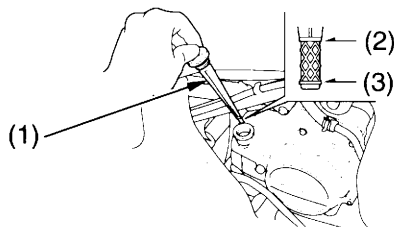

(1) oil filler cap/dipstick  
(2) upper level mark

(3) lower level mark