


# If a Fuse Blows

## Main Fuse Access

### UNDER SEAT

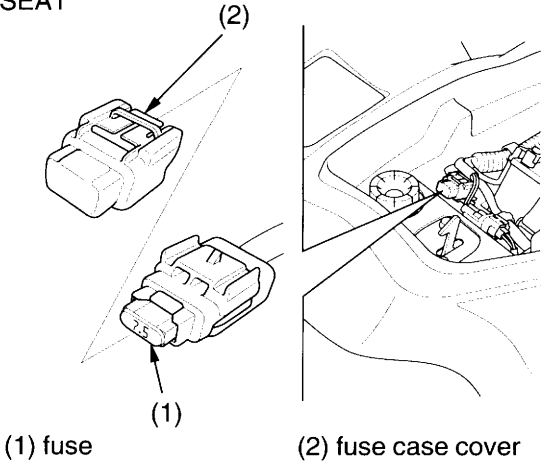

1. To prevent an accidental short circuit, turn the ignition switch OFF (  $\bigcirc$  ) before checking or replacing the fuse.
2. To access the fuse ( 1 ), remove the seat ( page 95 ).
3. Remove the fuse case cover ( 2 ).

(cont'd)