



Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			NOTE HOURS	20	100	200	
DRIVE CHAIN		NOTE 1, NOTE 2	I, L	I, L; EVERY 300 mi (500 km) or 50 operating hours		134	
DRIVE CHAIN SLIDER				I	I	136	
* BRAKE SHOE WEAR		NOTE 1			I	124	
BRAKE SYSTEM			I	I	I	118	
SKID PLATES				I	I	133	
* CLUTCH SYSTEM			I	I	I	111	
* SUSPENSION				I	I	—	
* SPARK ARRESTER				C	C	117	
* NUTS, BOLTS, FASTENERS			I		I	—	
** WHEELS/TIRES			I	I	I	—	
** TIE-ROD AND JOINT BOOTS			I	I	I	—	
** STEERING SHAFT HOLDER BEARINGS					I	—	
** STEERING SYSTEM					I	—	

- * Should be serviced by your Honda dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 194).
- ** In the interest of safety, we recommend these items be serviced only by your Honda dealer.

