



Engine Oil

3. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 160).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

Add Engine Oil:

1. Check that the drain plug sealing washer is in good condition. If necessary, replace the sealing washer.
2. Reinstall the oil drain plug and tighten it to the specified torque:
17 lbf·ft (24 N·m , 2.4 kgf·m)
3. Fill the crankcase with the recommended grade oil approximately:
0.7 US qt (0.7 ℓ)
4. Reinstall the oil filler cap/dipstick.
5. Start the engine and let it idle for 3 – 5 minutes.
6. Stop the engine and check the oil level. Make sure the oil is between the upper and lower level marks on the oil filler cap/dipstick. If necessary, add more oil but do not overfill.
7. Check that there are no oil leaks.



If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.

