

# Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

<b>Importance of Maintenance</b> .....	P. 49	<b>Coolant</b> .....	P. 74
<b>Maintenance Schedule</b> .....	P. 50	<b>Brakes/Clutch</b> .....	P. 76
<b>Maintenance Fundamentals</b> .....	P. 53	<b>Side Stand</b> .....	P. 80
<b>Tool kit</b> .....	P. 62	<b>Final Drive Oil</b> .....	P. 81
<b>Removing &amp; Installing Body Components</b> ..	P. 63	<b>Throttle</b> .....	P. 82
Seat.....	P. 63	<b>Other Adjustments</b> .....	P. 84
Clip .....	P. 64	Clutch and Brake Levers .....	P. 84
Final Gear Cover .....	P. 64	Front Suspension .....	P. 85
Right Engine Heat Guard & Right Under Cowl ..	P. 65	Rear Suspension.....	P. 86
Battery .....	P. 67	Headlight Aim.....	P. 88
<b>Engine Oil</b> .....	P. 68	Brakelight Switch .....	P. 88
		Windscreen Height .....	P. 89