


Clip

The clips must be removed to remove the right rear cowl.


Removal

1. Press down on the centre pin to release the lock.
2. Pull the clip out of the hole.

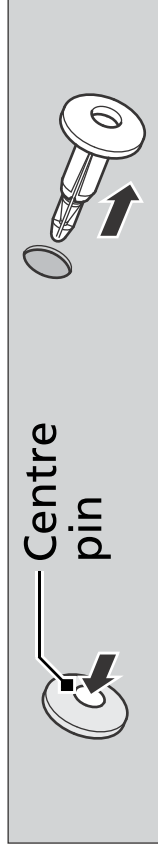


Installation

1. Push the bottom of the centre pin.
2. Insert the clip into the hole.
3. Press down on the centre pin to lock the clip.

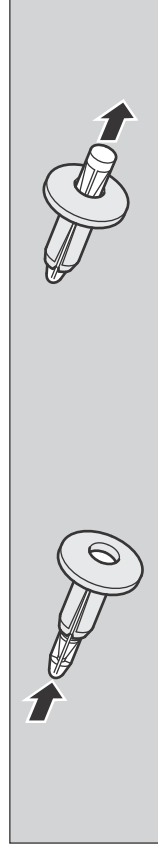

Final Gear Cover

The final gear cover must be opened to drain the final gear oil.

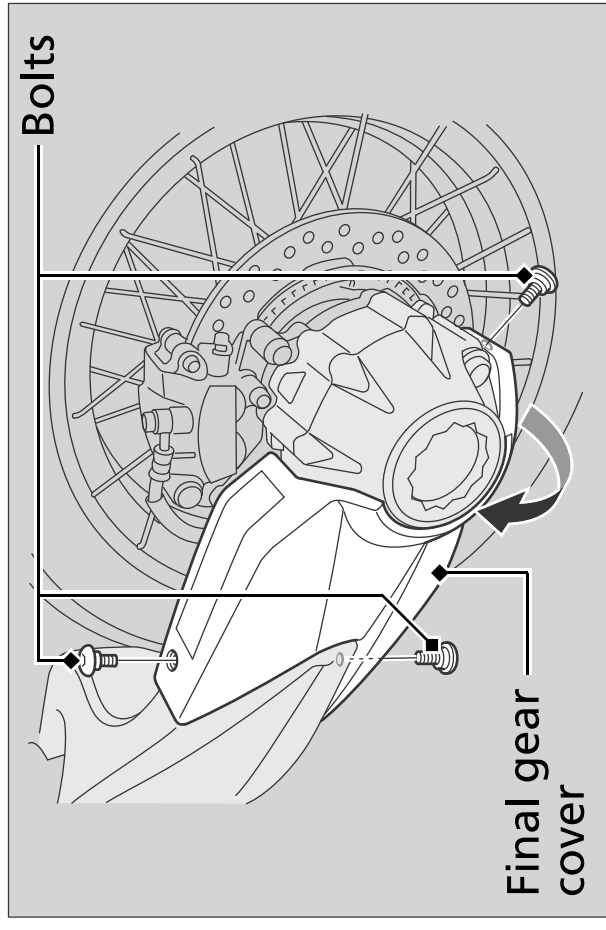

Removal

1. Remove the bolts.
2. Open the final gear cover.