

Ref. No.	Description	Function
1	Speedometer	Shows riding speed.
2	Tripmeter	Shows mileage per trip.
3	Odometer	Shows accumulated mileage.
4	Left turn signal indicator (amber)	Flashes when the left turn signal operates.
5	Tachometer	Shows engine rpm.
6	Right turn signal indicator (amber)	Flashes when the right turn signal operates.
7	Oil pressure warning light (red)	<p>Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p><b>CAUTION:</b></p> <p><b>* Running the engine with insufficient oil pressure may cause serious engine damage.</b></p>
8	Side stand indicator (amber)	<p>Lights when the side stand is put down.</p> <p>Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 71) is activated.</p>
9	High beam indicator (blue)	Lights when the headlight is on high beam.