


HEADLIGHT BEAM ADJUSTMENT

To adjust the headlight beam vertically, turn the knob (1), (2) in either direction.

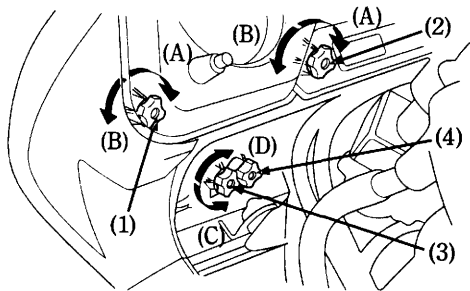

- (1) Adjusting knob (Right side) (vertical)
- (2) Adjusting knob (Left side) (vertical)
〈Except IT〉
- (3) Adjusting knob for right headlight
(horizontal) 〈Except IT〉
- (4) Adjusting knob for left headlight
(horizontal)
- (A) Up (C) Left
- (B) Down (D) Right

Turn the knob (3), (4) to adjust the headlight beam horizontally.
Obey local laws and regulations.

▲ WARNING

*** Do not adjust the headlight beam while riding the motorcycle. Operating the motorcycle with one or both hands away from the handlebar/controls may result in a loss of vehicle control.**