

## FUSE REPLACEMENT

(Refer to the maintenance precautions on page 61).

The main fuse (1), located near the negative (-) terminal lead behind the left side cover, is:


**30A (Main fuse)**

The spare main fuse (2) is located near the negative (-) terminal lead.

The fuse box is located near the right side fairing (5). The specified fuse are:

**10A and 20A**

**10A and 15A (G)**

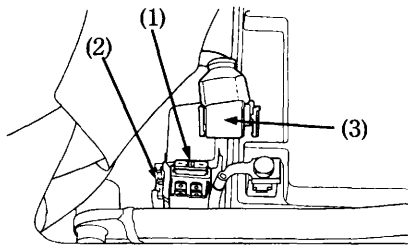


- (1) Main fuse      (3) Wire connector  
(2) Spare main fuse

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

### CAUTION:

**\*Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

To replace the main fuse (1), remove the seat (page 39), disconnect the wire connector (3) of the starter magnetic switch and pull out the old fuse. Install a new fuse and reconnect the connector.

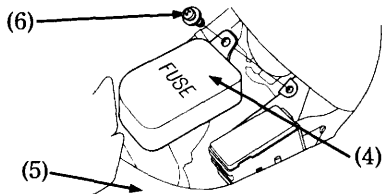

- (4) Fuse box case cover      (6) Screw  
(5) Right side fairing