



FUEL TANK MAINTENANCE POSITION

The front of the fuel tank can be tilted up for maintenance.

The fuel tank does not require draining.

To raise:

1. Remove the two bolts (1) with washers.
2. Raise the front of the fuel tank (4) and install the bolt (1) to frame body.
3. Insert a pinspinner (2) from the tool set in the extension bar (3).
4. Raise the front of the fuel tank (4) and place the pinspinner (2) and extension bar (3) between the front of the fuel tank (4) and frame body.

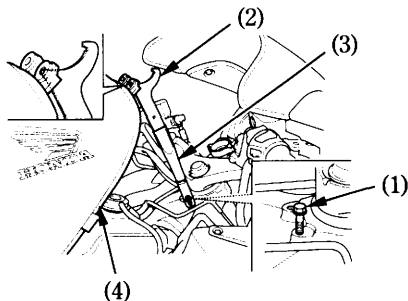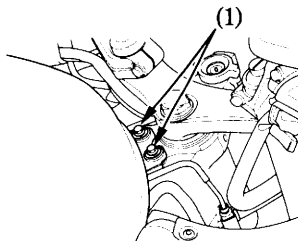

- (1) Bolts
(2) Pinspinner

- (3) Extension bar
(4) Fuel tank