


## REAR COWL

### Removal:

1. Remove the seat (page 47).
2. Remove the grab rails (page 50).
3. Remove the bolts A (1), bolts B (2) and bolts C (3).
4. Remove the connectors (4).
5. Remove the rear cowl (5).

### Installation:

- Installation can be done in the reverse order of removal.

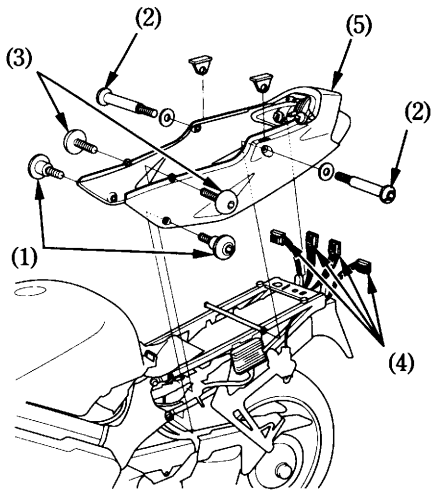

- (1) Bolts A  
(2) Bolts B  
(3) Bolts C

- (4) Connectors  
(5) Rear cowl