



Parts Location

Rear brake fluid reservoir → P.67

Fuse box → P.96

Front brake fluid reservoir

→ P.67

Front brake lever → P.75

Throttle grip → P.74

Coolant reserve tank

→ P.65

Right front side cowl

→ P.57

Engine oil filter → P.63

Engine oil inspection window → P.61

Engine oil fill cap → P.61

