


# Instruments

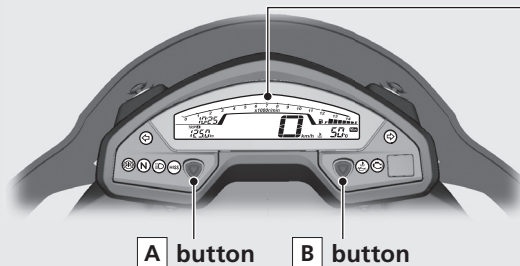

## Display Check

When the ignition switch is turned ON, all the mode and digital segments will show, and the tachometer will sweep to 14,000 rpm and go off.

If any part of these displays does not come on when it should, have your dealer check for problems.

## Changing the Speed, Mileage and Fuel Mileage Unit

(E type only)

Press and hold **A** and **B** buttons to change the speed, mileage and fuel mileage units ("km/h" & "km" & "km/l" or "mph" & "mile" & "mile/l") for speedometer, odometer, tripmeter and fuel mileage meter.

Press **A** button to select either "km/h" & "km" & "km/l" or "mph" & "mile" & "mile/l", then press **B** button to set. Also you can change the indication mode of fuel mileage.

➔ P.27