



Clock (12-hour display)

 
To set the clock: P.29



Speedometer

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing:
approximately 4.5 litres
(1.19 US gal, 0.99 Imp gal)



Tachometer

NOTICE

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

Tachometer red zone

(excessive engine rpm range)

At the same time, the display switches to the reserve fuel consumption. P.28

If the fuel gauge indicators repeat flashing or turned off: P.84

continued 21