

Indication mode of fuel mileage change

When the odometer or tripmeter A is displayed can be set the unit for current and average fuel mileage.

1 Except E type

Press and hold **A** button and **B** button.

 
E type only

This function can be operated after the speedometer is selected in "km/h".

➡ P.20

The unit in the multi-function display starts to blink.

- 2 Press **A** button to select "km/l" or "l/100km".



- 3 To end the selection, press **B** button.

continued 27