



## Instruments *(Continued)*

### Reserve fuel consumption display

Reserve fuel consumption display automatically switches from other display when the 1st (E) segment of the fuel gauge is flashed.

You should refill the tank as soon as possible.

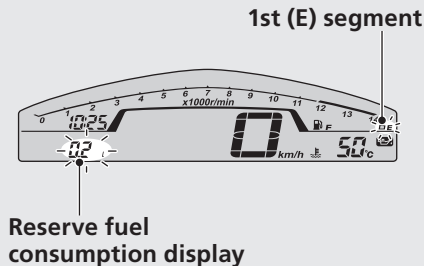

- Flashes from 0.0 “l (litre)”.
  - ▶ When the amount of consumed fuel is more than 1.0 litre (0.26 US gal, 0.22 Imp gal) the display blinks faster.
  - ▶ If you change the display to odometer, tripmeter and so on , it will automatically return to the reserve fuel consumption display if the buttons are not pressed for about 10 seconds.

After refuelling more than the reserve amount, the display returns to normal when the ignition switch has been ON for about a minute.