


## Instruments (Continued)

Operation Guide

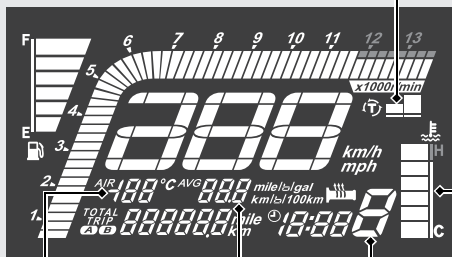

**Torque Control level** → P.43

**Coolant temperature gauge ( 上 )**

- Above 122 °C:
  - High coolant temperature indicator lights
  - 6th (H) segment flashes
- ▶ Even if the engine coolant temperature is low, the cooling fan may start running when you rev up the engine. This is normal.

**Gear position indicator** → P.24

**Fuel mileage meter/Average speed** → P.25

**Air temperature gauge (AIR)**

Display range: -10 to 50 °C

- Below -11 °C: "--" displays
- Above 50 °C: "50" ( °C) flashes
- ▶ The temperature readout may be incorrect at low speeds due to reflected heat.