

Instruments *(Continued)*

If an indication other than the mileage countdown is displayed, the indication automatically switches to the mileage countdown and flashes "0.0" km or mile.

- ▶ To reset the mileage countdown distance, press and hold **[SEL]** button when mileage countdown is displayed.
- ▶ When changing the unit to "km" after setting the trip distance to "625 mile" or more with the unit set to "mile" unit, the thousands place digit is not displayed because the distance exceeds the maximum display range.

To set the mileage countdown: ➡ P. 34

Gear position indicator

Shows 1st to 6th gear position.

When the ignition switch is turned on with the transmission in 3rd gear or higher, the gear position indicator will be displayed as shown in the illustration.



After the transmission is shifted to 2nd gear, the gear position indication will display the correct gear position.

Always use the recommended tyres and sprockets to ensure correct gear position indication.