

3 HISS indicator setting:

You can select the blink or off the HISS indicator.

 
- 1 Press **[SEL]** button to select "On" (blinks) or "OFF" (off).



- 2 Press **[SET]** button. The HISS indicator setting is set, and then the display moves to the changing of the speed and mileage unit.

4 Changing the speed and mileage unit:

- 1 Press **[SEL]** button to select either "km/h" & "km" or "mph" & "mile".



- 2 Press **[SET]** button. The speed and mileage unit is set, and then the display moves to the changing of the fuel mileage meter unit.