

Other Adjustments ▶ Adjusting the Front Suspension

## Adjusting the Front Suspension

### Spring Preload

You can adjust the spring preload by the adjuster to suit the load or the road surface. Turn the adjuster using the preload spanner provided in the tool kit. ▶ 67

Turn clockwise to increase spring preload (hard), or turn counterclockwise to decrease spring preload (soft). The standard position is 5th groove from the top aligning with the top surface of the fork bolt.

