



Other Adjustments ▶ Changing the Front Seat Height

▶ When setting the low seat position:

Install the front seat by aligning its recesses with the front side stays and its prong with the front centre stay.

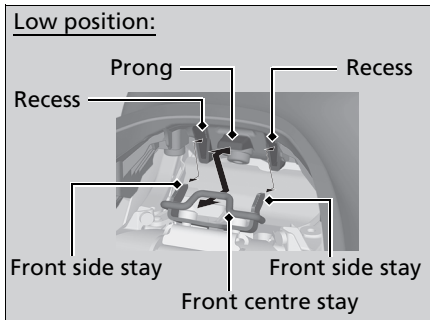

6. Make sure that the mount positions of the front seat prong and the adjust plates are the same seat position.

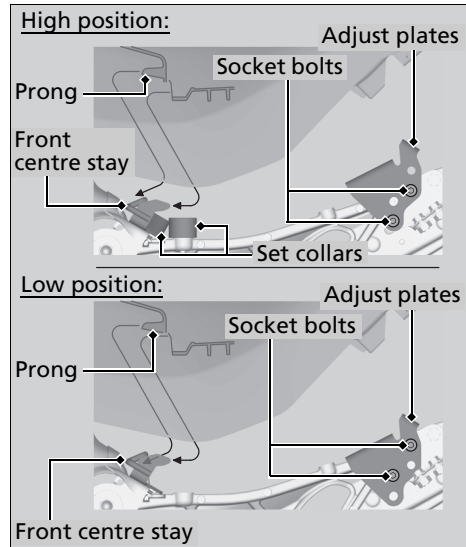

Maintenance