


Electrical Trouble ► Blown Fuse

I Main Fuse & FI Fuse

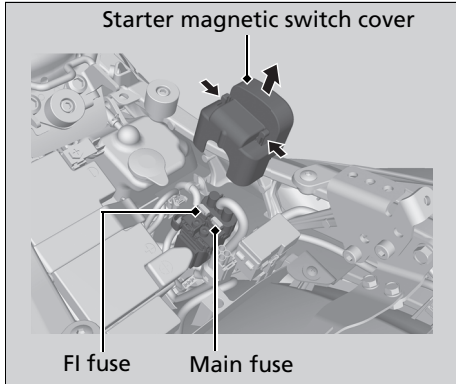

1. Remove the battery cover. ► P. 72
2. Remove the starter magnetic switch cover.

3. Pull the main fuse and FI fuse out with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
 - Spare fuses are provided in the fuse box.
4. Reinstall parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.

Troubleshooting