

MAINTENANCE SCHEDULE

Perform Pre-ride Inspection (Page 76), at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary.

C: Clean R: Replace A: Adjust L: Lubricate

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓	ODOMETER READING (NOTE (3))				Refer to
			1,000 km (600 mi.)	6,000 km (3,600 mi.)	12,000 km (7,200 mi.)	18,000 km (10,800 mi.)	
		EVERY					
* FUEL LINE				I	I	I	
* FUEL STRAINER			C	C	C	C	
* THROTTLE OPERATION			I	I	I	I	
* CARBURETOR-CHOKE				I	I	I	
AIR CLEANER		NOTE (1)				R	Page 114
CRANKCASE BREATHER (SW)		NOTE (2)		C	C	C	Page 124
SPARK PLUG				R	R	R	Page 102
* VALVE CLEARANCE			I	I	I	I	Page 106
ENGINE OIL		YEAR	R	REPLACE EVERY 6,000 km (3,600 mi)			Page 96
ENGINE OIL FILTER		YEAR	R	REPLACE EVERY 12,000 km (7,200 mi)			Page 98
* CARBURETOR-IDLE SPEED			I	I	I	I	Page 120
* CARBURETOR SYNCHRONIZATION			I	I	I	I	
RADIATOR COOLANT				I	I	*R	
* RADIATOR CORE				I	I	I	
* COOLING SYSTEM HOSE & CONNECTIONS			I	I	I	I	