

- To adjust the slack, loosen both lock nut (2) and adjusting nut (3). Loosen the axle nut (1). Make sure that the same graduations (4) on the chain adjusters align with the rear edges (5) of the swingarm slots on both sides.
- Check the chain wear label when adjusting the chain. If the red zone (6) on the label aligns with the arrow (7) after the chain has been adjusted to 15–25 mm (5/8-1 in.) slack, the chain is excessively worn and must be replaced.

