


Side cover removal

Remove the side cover in the following steps.

1. Remove the seat.
2. Pull the side cover (1) forward and unhook both the front and rear hooks.
3. Pull the side cover rear ward and remove hook (2).

NOTE:

Do not pull the side cover with force as it might cause the damage to the cover.

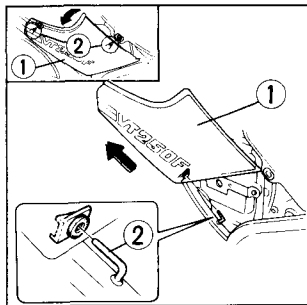

Battery Care

Inspecting and maintaining the electrolyte level should be performed at the mileage intervals indicated in the Maintenance Schedule (page 29) and Pre-riding Inspection (page 24). The electrolyte level must be maintained between the upper (1) and lower (2) level marks. If low, add distilled water to raise the levels. Use a syringe or plastic funnel. The battery is accessible by removing the side cover.

CAUTION: When checking battery electrolyte level or adding distilled water, make sure the breather tube is connected to battery outlet.

