

### Installation Note:

To install the rear wheel, reverse the removal procedure. Make sure that the lug on the swingarm is located in the slot in the brake panel.

Adjust the drive chain (page 65—66) and the rear brake (page 19—20).

Tighten the drive chain adjusting nut lightly, then hold the adjusting nut with a wrench.

Secure the lock nut on each side of swingarm.

Torque the axle nut to the specified torque.

Axle nut torque:

90 N·m (9.0 kg·m, 65 ft·lb)

After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

### **⚠ WARNING**

- \* **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capability.**