

BRAKE PAD WEAR

(Refer to the maintenance precautions on page 54).


Brake pad wear will depend upon the severity of usage, type of riding and condition of the roads. The pads will wear faster on dirty and wet roads. Inspect the pads visually during all regular service intervals to determine the pad wear. If either pad wears to the bottom of the groove (1), both pads must be replaced as a set.

Other checks:

Make sure there are no fluid leaks. Check for deterioration or cracks in the hoses and fittings.

NOTE:

- * Use only genuine Honda replacement friction pads offered by authorized Honda dealers. When brake service is necessary consult your Honda dealer.

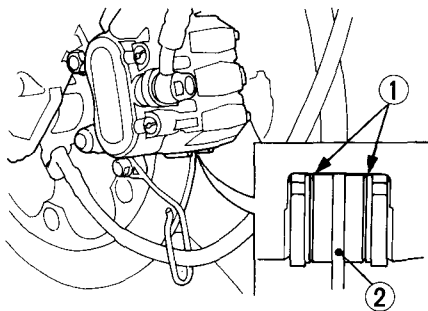

(1) Groove

(2) Brake disk