

| (Ref.No.) Description | Function |
|---|---|
| (8) Low oil pressure indicator (red) | <p>Lights when the engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>NOTICE</p> <p>Running the engine with insufficient oil pressure may cause serious engine damage.</p> |
| (9) Neutral indicator (green) | Lights when the transmission is in neutral. |
| (10) Odometer/Tripmeter/Digital clock select and reset button | <p>Use this button for the following purposes.</p> <ul style="list-style-type: none"> • To change indication of odometer, tripmeter 1, tripmeter 2 and digital clock (page 18) • To reset tripmeter 1 and tripmeter 2 (page 18) • To adjust time (page 19). • To switch blinking of the immobilizer system (HISS) indicator (page 44) |