



6. Remove the exhaust pipe joint nuts (8).

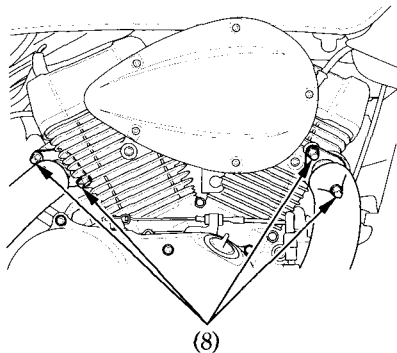

(8) Exhaust pipe joint nuts

7. Remove the muffler bracket bolts (9),  
nuts (10) and washers.  
8. Remove the mufflers.

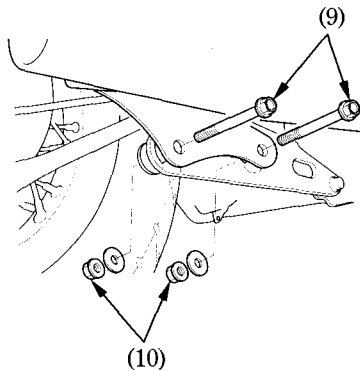

(9) Muffler bracket bolts  
(10) Muffler bracket nuts