


12. While holding the other end of the rear axle shaft (18) with a wrench, remove the rear axle nut (19).
13. Pull the rear axle shaft out and remove the side collar.
14. Move the wheel to the right to separate it from the final drive gear case.
15. Remove the rear wheel.

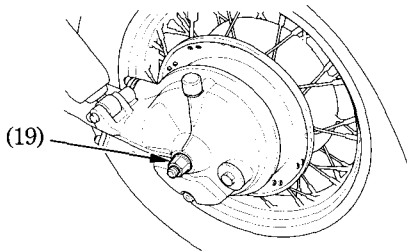

(19) Rear axle nut

Installation Notes:

- Reverse the removal procedure.
- Before installing the rear wheel, check that the wheel hub and final drive gear splines are coated with grease.
- Be sure the splines on the wheel hub fit into the final gear case.
- Used cotter pins may not effectively secure fasteners. Always replace used cotter pins with new ones.
- Before installing the muffler, replace the muffler gasket with a new gasket.