


3. Apply the brake several times and check for free wheel rotation after the brake pedal is released.

**NOTE:**

- \* Make sure the cut-out on the adjusting nut is seated on the brake arm pin (5) after making final free play adjustment.
- \* If proper adjustment cannot be obtained by this method see your authorized Honda dealer.

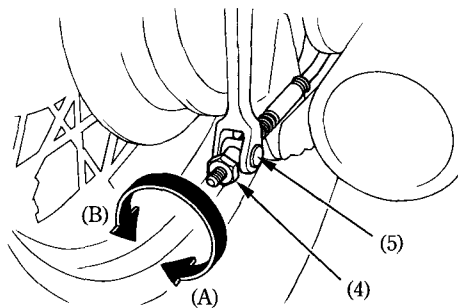

(4) Adjusting nut

(5) Arm pin

(A) Decrease free play

(B) Increase free play

Other Checks:

Make sure the brake arm, brake rod, spring and fasteners are in good condition.