


### Fuse box:

The fuse box (1) is located behind the right side cover. The specified fuse are:

10A, 15A

1. Remove the right side cover (page 34).
2. Remove the fuse box cover (2) by removing the screw (3).

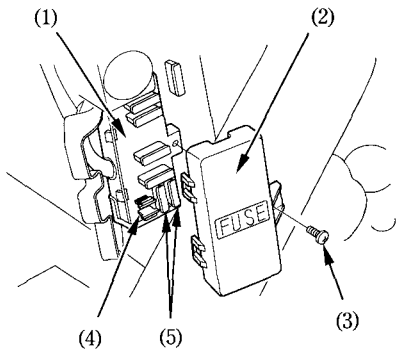

- |                    |                  |
|--------------------|------------------|
| (1) Fuse box       | (4) Fuse remover |
| (2) Fuse box cover | (5) Spare fuses  |
| (3) Screw          |                  |

3. Pull out the fuse with the fuse remover (4). If the fuse is blown, install a new fuse. The spare fuses (5) are located in the fuse box.
4. Install the fuse box cover and right side cover.

