

Maintenance Schedule

ITEM	FREQUENCY	NOTE	ODOMETER READING (Note 1)								Refer to page	
			× 1,000 mi	0.6	4	8	12	16	20	24		
			× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
EMISSION RELATED ITEMS	*	FUEL LINE				I			I		I	—
	*	THROTTLE OPERATION				I			I		I	98
	*	CHOKE OPERATION				I			I		I	—
		AIR CLEANER	2					R			R	92
	*	SUB AIR CLEANER						R			R	—
		CRANKCASE BREATHER	3		C	C	C	C	C	C	C	94
		SPARK PLUGS			I	R	I	R	I	R	I	106
	*	VALVE CLEARANCE			I		I		I		I	—
		ENGINE OIL			INITIAL = 600 mi (1,000 km) or 1 month: R REGULAR = EVERY 8,000 mi (12,800 km) or 12 months: R							78
		ENGINE OIL FILTER			R		R		R		R	83
	*	ENGINE IDLE SPEED			I	I	I	I	I	I	I	104
		RADIATOR COOLANT	4				I		I		R	88
*	COOLING SYSTEM					I		I		I	—	
*	SECONDARY AIR SUPPLY SYSTEM					I		I		I	—	
*	EVAPORATIVE EMISSION CONTROL SYSTEM	5						I		I	—	

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 202).