


# Storage Compartment

## LEFT SIDE

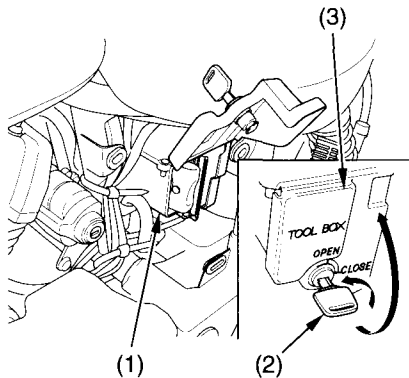

- (1) storage compartment
- (2) ignition key
- (3) storage compartment lid

The storage compartment ( 1 ) is located behind the left side cover (page 73 ).

The tool kit and owner's manual (and other documents) should be stored in the storage compartment.

To open the storage compartment, remove the left side cover (page 73 ). Insert the ignition key ( 2 ) and turn it 90 degrees counterclockwise. Open the storage compartment lid ( 3 ).

To close the storage compartment, close the storage compartment lid. Turn the ignition key 90 degrees clockwise and remove it. Install the left side cover (page 73 ).