

## Side Cover Removal


Refer to *Safety Precautions* on page 56 .

The right side cover must be removed to service the fuses.

The left side cover must be removed to access the storage compartment and check the color label or to service the battery.

The right and left side covers can be removed in the same manner.

### LEFT SIDE

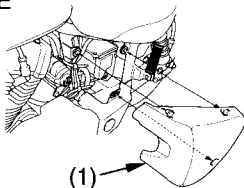

(1) side cover


### Removal

1. Grasp the side cover ( 1 ).
2. Pull out.

### Installation

1. Position the cover so the prongs on the inside of the cover are line up above their securing slots.
2. Push the cover in place.

### RIGHT SIDE

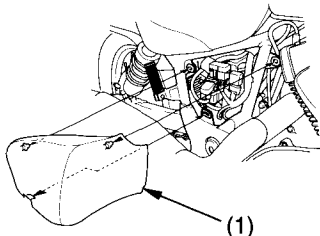

(1) side cover