


Brakes

After adjustment, push the brake arm (1) to confirm that there is a gap between the rear brake adjusting nut (2) and the brake arm pin (3).

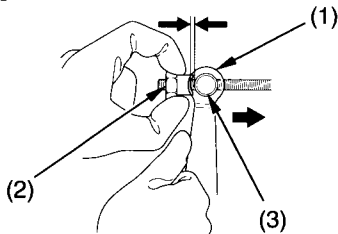

(1) brake arm (3) brake arm pin
(2) adjusting nut

After adjustment, confirm the freeplay of the brake pedal.

Other Inspections

- Check that the brake pedal assembly is positioned properly and the securing bolts are tight.
- Make sure the brake rod, brake arm, spring, and fasteners are in good condition.