


# If You Have a Flat Tire

4. Remove the front axle shaft (3), wheel, and side collar.

LEFT FRONT

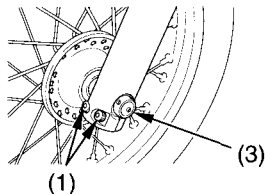

- (1) axle pinch bolts  
(3) front axle shaft

Avoid depressing the brake lever when the wheel is off the motorcycle. This will force the caliper pistons out of the cylinders. The result will be loss of brake fluid. If this occurs, the brake system will require service. See your Honda dealer for this service.

## Installation

1. Install the side collar and position the wheel between the fork legs. Insert the front axle shaft from the left side, through the left fork leg and wheel hub.
  - To avoid damaging the brake pads, carefully fit the brake disc (4) between the pads.

(cont'd)