


Fuse Box:

The fuse box (1) is located behind the right side cover.

The specified fuse are:
5A, 10A

1. Remove the right side cover (page 48).
2. Open the fuse box cover (2).
3. Pull out the old fuse and install a new fuse.
The spare fuses (3) are located in the fuse box.
4. Close the fuse box cover and install the right side cover.

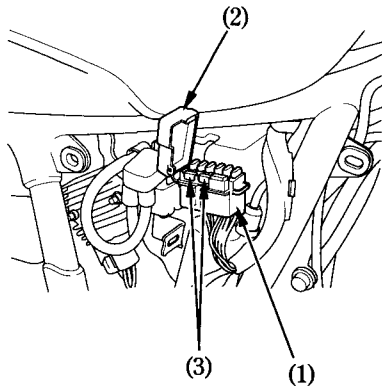

- (1) Fuse box
- (2) Fuse box cover
- (3) Spare fuses