

# Starting & Stopping the Engine

The low oil pressure indicator should go off a few seconds after the engine starts. If the low oil pressure indicator lights during operation, stop the engine immediately and check the engine oil level.


## Starting Procedure

To restart a warm engine, follow the procedure for *High Air Temperature*.

### Normal Air Temperature

10° – 35°C (50° – 95°F)

#### LEFT SIDE

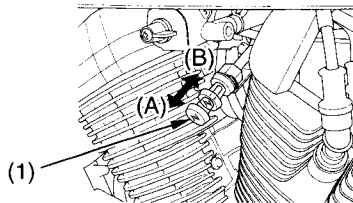

(1) choke knob

(A) fully ON

(B) fully OFF