## **Starting & Stopping the Engine**

3. Continue warming up the engine until it runs smoothly and responds to the throttle when the choke knob is at fully OFF (B).

## NOTICE

Extended use of the choke may impair piston and cylinder wall lubrication and damage the engine.

Snapping the throttle or fast idling for more than about 5 minutes at normal air temperature may cause exhaust pipe discoloration.

## Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine:

- 1. Leave the engine stop switch set to RUN.
- 2. Push the choke knob in all the way to fully OFF.
- 3. Open the throttle fully.
- 4. Press the start button for 5 seconds.