

Maintenance Schedule

ITEM		FREQUENCY	ODOMETER READING (Note 1)								Refer to page
			× 1,000 mi	0.6	4	8	12	16	20	24	
		NOTE	× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4	
NON-EMISSION RELATED ITEMS	FINAL DRIVE OIL									R	93
	BRAKE FLUID	5					R			R	111
	BRAKE SHOE/PAD WEAR										113, 116
	BRAKE SYSTEM										110
	* BRAKE LIGHT SWITCH										—
	* HEADLIGHT AIM										—
	CLUTCH SYSTEM										98
	SIDE STAND										124
	* SUSPENSION										—
	* NUTS, BOLTS, FASTENERS										—
	** WHEELS/TIRES										—
	** STEERING HEAD BEARINGS										—

- * Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 194).
- **In the interest of safety, we recommend these items be serviced only by your Honda dealer.