


# Side Cover Removal

Refer to *Safety Precautions* on page 54 .

The right side cover must be removed to service the fuses.

The left side cover must be removed to access the storage compartment and check the color label.

## LEFT SIDE

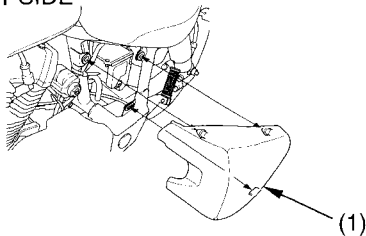

(1) left side cover


## Removal

1. Grasp the right side cover (1) on both sides.
2. Pull out.

## Installation

1. Position the cover so the three prongs on the inside of the cover are line up above their securing slots.
2. Push the cover in place.

## RIGHT SIDE

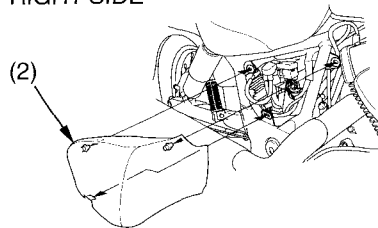

(2) right side cover