Engine Oil & Filter

- 7. Remove the oil filler cap/dipstick and check the oil level.
 - If the oil is at or near the upper level mark (2) — you do not have to add oil.
 - If the oil is below or near the lower level mark (3) — add the recommended oil until it reaches the upper level mark. (Do not overfill.)
- 8. Reinstall the oil filler cap/dipstick.
- 9. Check for oil leaks.

Changing Engine Oil & Filter

Refer to Safety Precautions on page 54.

Your motorcycle's oil filter has very specific performance requirements. Use a new genuine Honda oil filter or a filter of equal quality specified for your model.

NOTICE

Using the wrong oil filter may result in leaks or premature engine damage.

(cont'd)