


If a Fuse Blows

Main Fuse Access:

2. To access the main fuse (1), remove the right side cover (page 71).

RIGHT SIDE

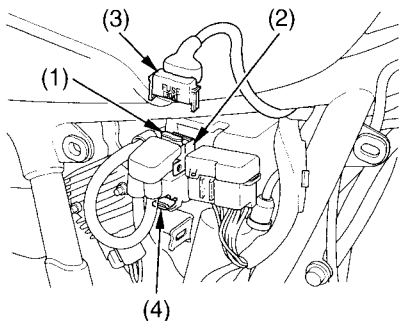

- (1) main fuse
- (2) starter magnetic switch
- (3) wire connector
- (4) spare main fuse

3. Disconnect the wire connector (3) of the starter magnetic switch (2).
4. Pull the fuse out. If the main fuse is blown, install a new main fuse (4).
5. Reconnect the wire connector.

Circuit Fuse Access:

6. Open the fuse box cover (5).
7. To check or replace a circuit fuse, pull the old fuse out of its retaining clips. Look for a burned wire inside the fuse. If the fuse is blown (6), replace it with a spare fuse (7) of the same rating or lower.