

SIDE COVER

The right side cover must be removed to inspect fuse. The left side cover must be removed to access the tool kit and colour label.


The right and left side covers can be removed in the same manner.

Removal:

1. Carefully pull the side cover (1) (2) out until the prongs (3) are clear of the rubber grommets (4).
2. Remove the side cover.

Installation:

1. Align the prongs with the rubber grommets.
2. Push the prongs in.

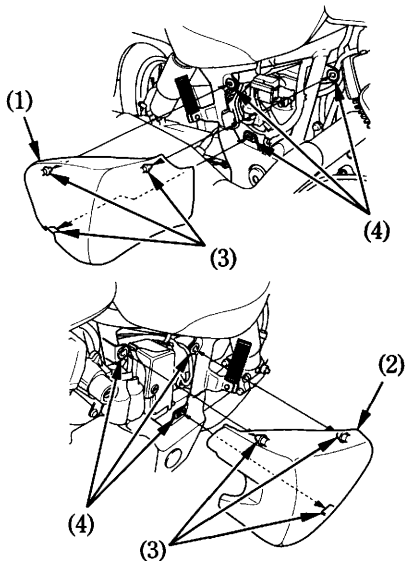

(1) Right side cover

(2) Left side cover

(3) Prongs

(4) Rubber grommets