

<b>(Ref.No.) Description</b>	<b>Function</b>
(1) Neutral indicator (green)	Lights when the transmission is in neutral.
(2) Turn signal indicator	Flashes when the either turn signal operates.
(3) High beam indicator (blue)	Lights when the headlight is on high beam.
(4) Speedometer	Shows riding speed.
(5) Coolant temperature indicator (red)	<p>Lights when the coolant is over the specified temperature. If the indicator goes on while riding, stop the engine and check the reserve tank coolant level. Read pages 21 – 22 and do not ride the motorcycle until the problem has been corrected.</p> <p><b>NOTICE</b></p> <p>Exceeding maximum running temperature may cause serious engine damage.</p>