

5. Tyres—check condition and pressure (page 28 – 32 ). Also check condition of rims and spokes.
6. Drive chain—check condition and slack (page 83 ). Adjust and lubricate if necessary.
7. Throttle—check for smooth opening and full closing in all steering positions.
8. Lights and horn—check that headlight, tail/brake light, turn signals, indicators and horn function properly.
9. Engine stop switch—check for proper function (page 34 ).
10. Side stand ignition cut-off system—check for proper function (page 79 ).